



TRIOBIKE




HAFNIA

HOOD INSTALLATION MANUAL

ENGLISH V 1.3



# HOOD PARTS

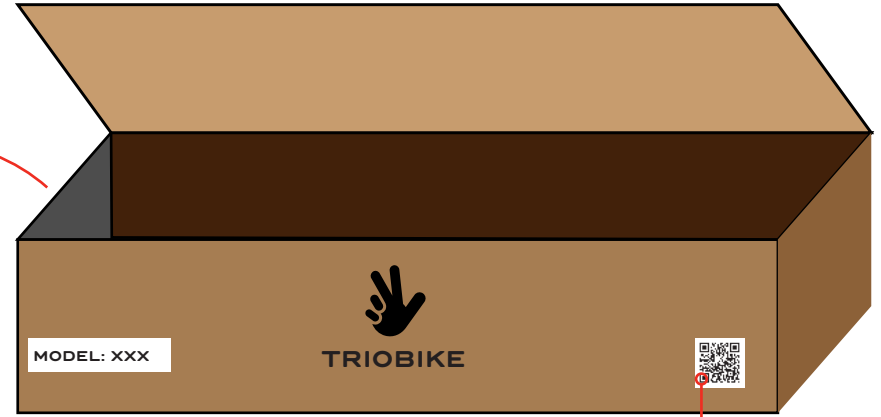


MODEL: XXX

TRIOBIKE




QR code - scan to download the manual

1x hood fabric

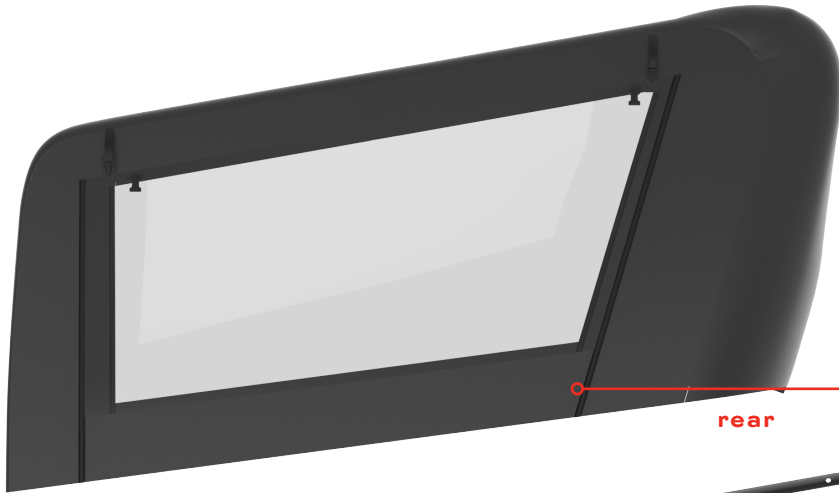

front

rear

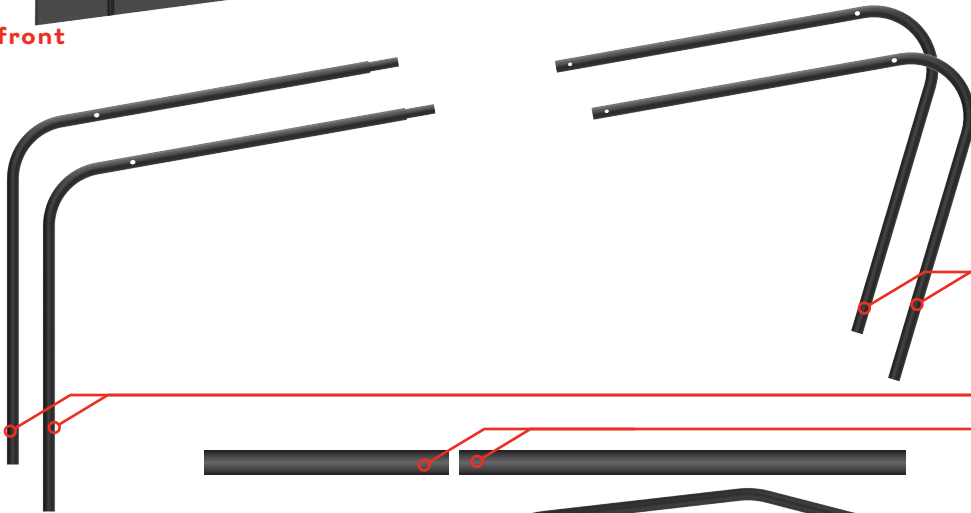

2x hood frame side tubes - rear part

2x hood frame side tubes - front part


2x hood frame longitudinal bridge foam grips



hood frame longitudinal bridge - rear part


hood frame longitudinal bridge - front part

2x hood frame bridges

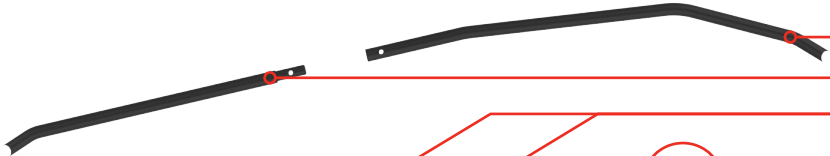


3x DIN 7380 M6X15 bolts

6x DIN 7380 M6X27 bolts

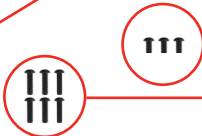




## INSTALLING THE HOOD

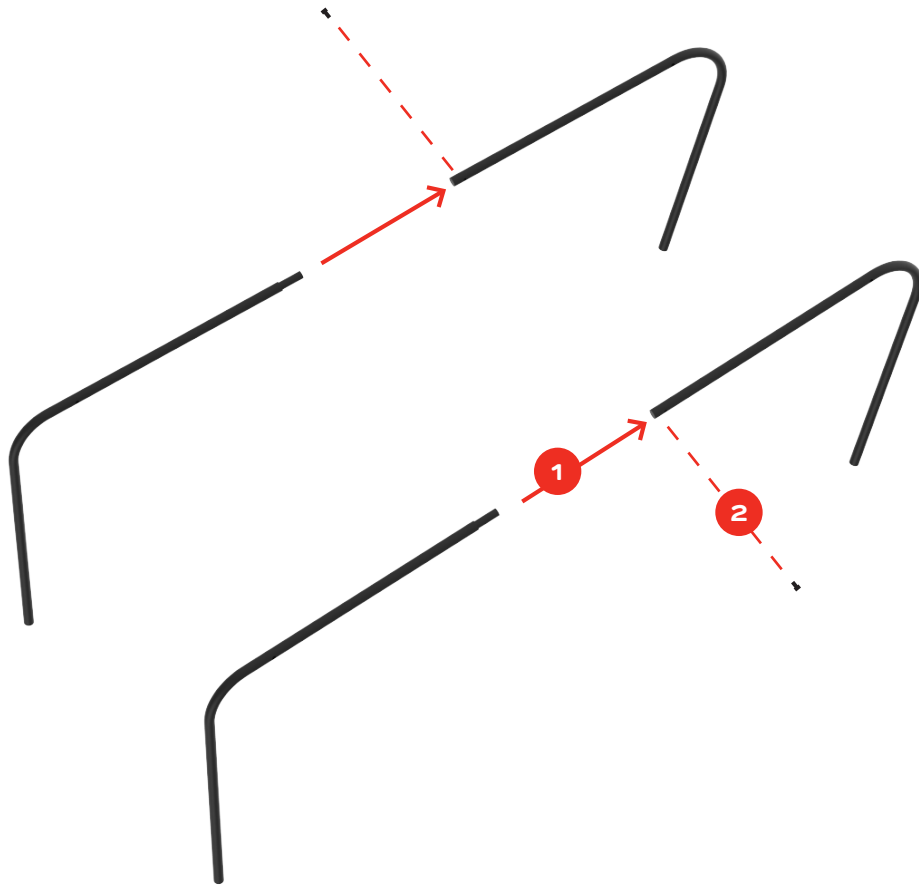

- 1- Open the box and place all the parts on a flat and clean surface.
- 2- Take the 4 bent tubes and connect them as shown on the picture above, using 1x M6x15 bolts each.


4

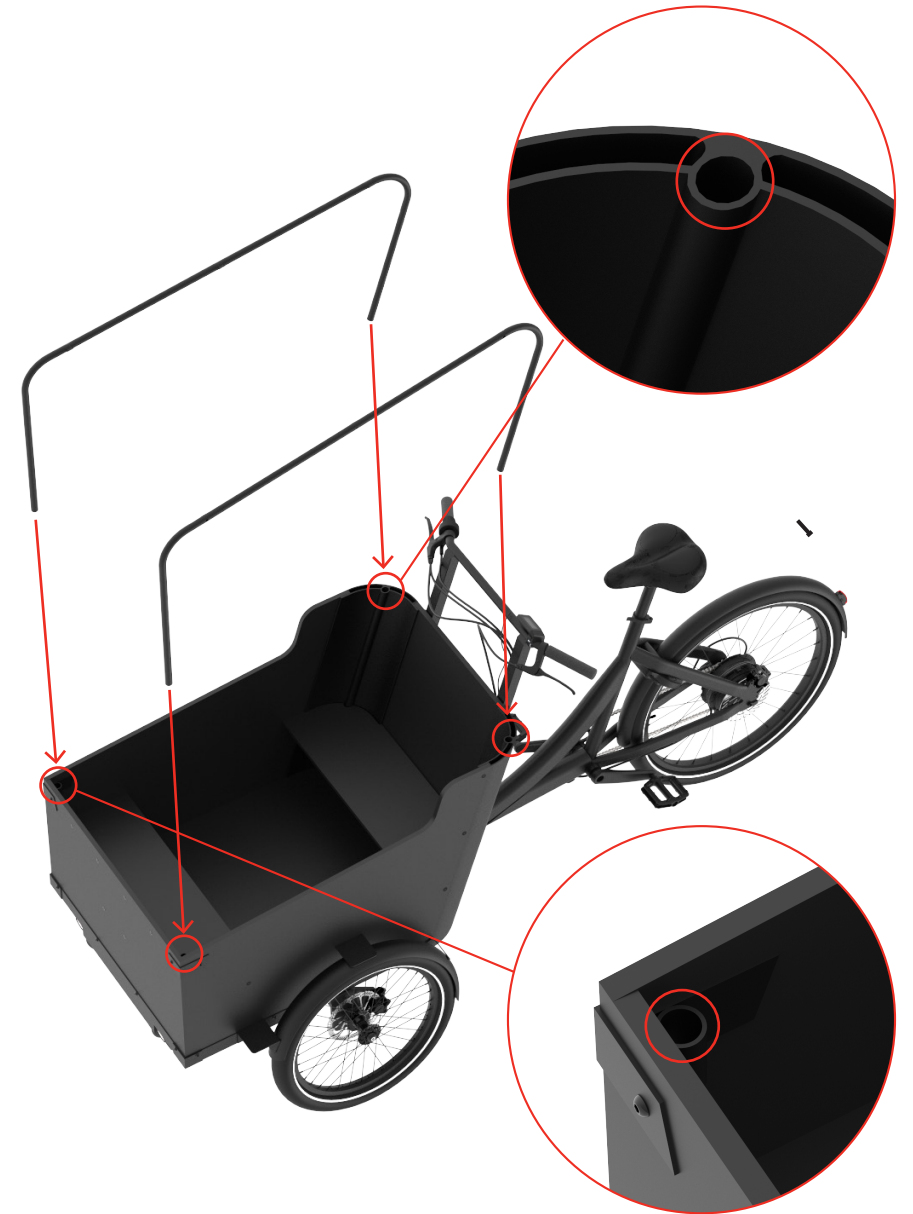

- 3- Insert the hood frame on the bike box: the frame has to enter into the tubes marked with the red circles. You should hear a CLICK sound when the tubes are correctly inserted.

5


## INSTALLING THE HOOD

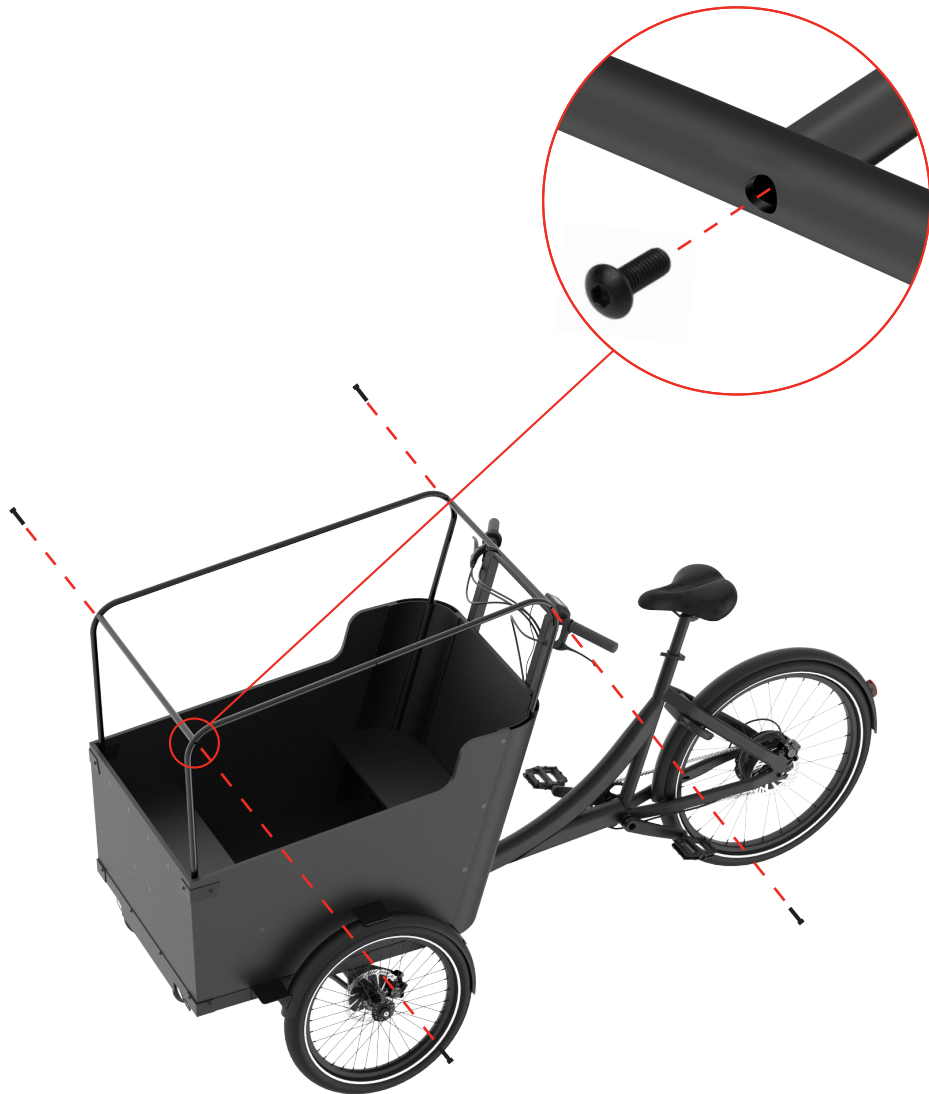

**4-** Take the 2 straight bars and fix them to the side frame tubes with the 4x DIN7380 M6x27 bolts. The long bar goes to the front, the short one to the back.

6

## INSTALLING THE HOOD

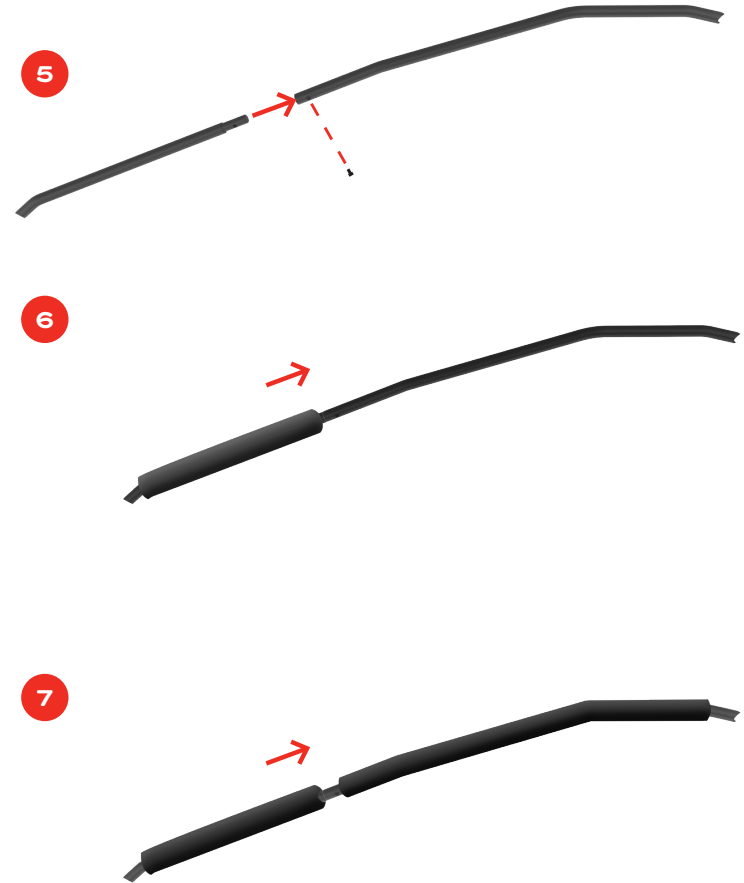


**5-** Connect the 2 parts of the longitudinal mid bridge as shown on the picture above, using 1x M6x15 bolt each.

**6-** Slide the foam grip on the longitudinal bridge front part, place it as shown above.

**7-** Slide the foam grip on the longitudinal bridge rear part, place it as shown above.

7

## INSTALLING THE HOOD

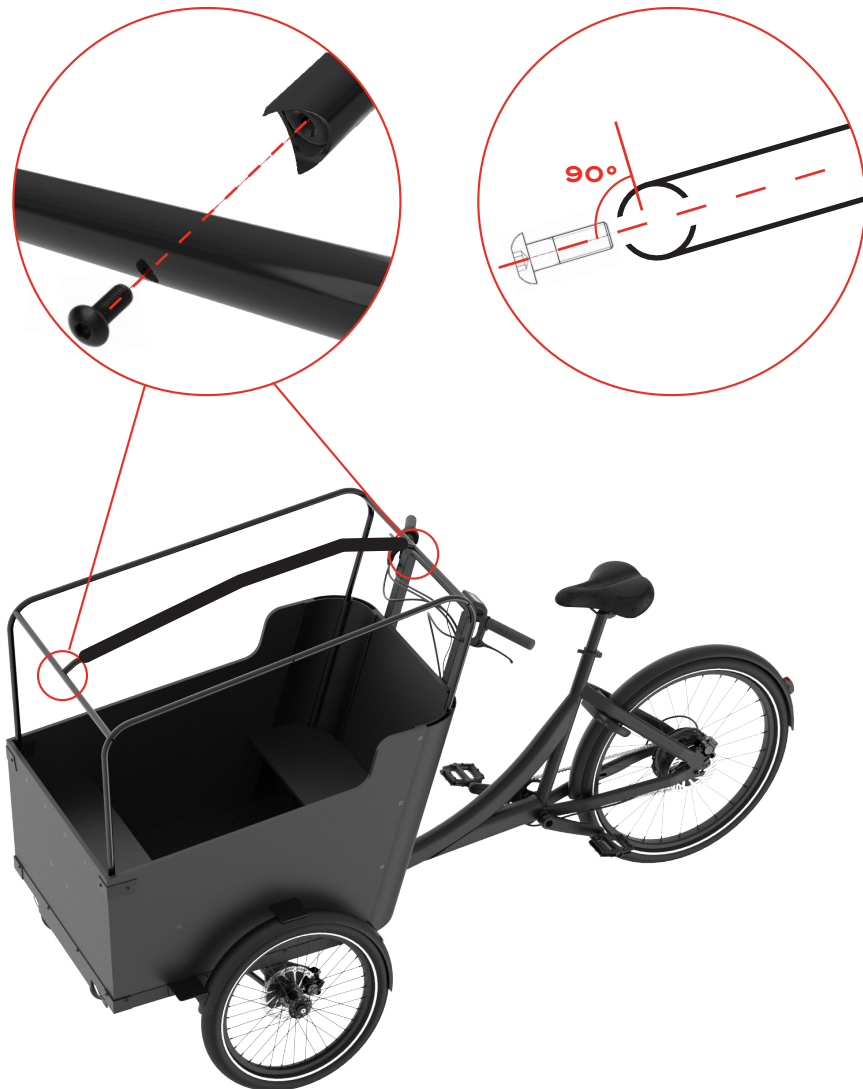

**8-** Connect the longitudinal mid bridge to the transversal ones, using 2x M6x27 bolts.  
The part with the sharpest bend goes to the rear.

**THE ANGLE BETWEEN LONGITUDINAL AND TRANSVERSAL BRIDGES MUST BE 90°, THE BOLTS HAVE TO ENTER EASILY. IF NOT, YOU NEED TO TURN 180° THE TRANSVERSAL BRIDGES.**

8

## INSTALLING THE HOOD



**9-** Unfold the soft cover and place it on the hood frame.

9

## INSTALLING THE HOOD



**10-** Close all the snaps located around the hood cover.



TRIOBIKE

TRIOBIKE A/S

Vesterbrogade 149, 1620 Copenhagen V - Denmark

phone: +45 3670 0070

info@triobike.dk | www.triobike.com